LARGE ALTA DISPLAY TABLE


Item #T501SC-H

INCLUDED HARDWARE






6X WOOD SCREWS

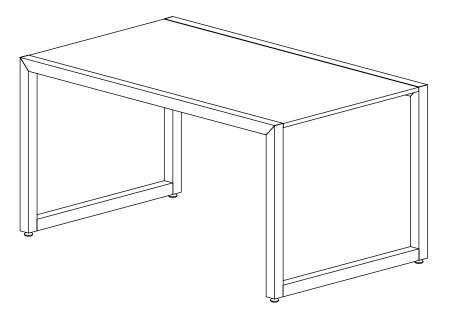

SHOWN WITH TSF60321H WOOD TOP



12X BUTTON HEAD SCREWS

TOOLS REQUIRED






POWER DRILL (NOT INCLUDED)






1


ASSEMBLE SIDE FRAMES WITH LOWER SUPPORTS AS SHOWN. TIGHTEN SCREWS WITH LARGE ALLEN KEY.

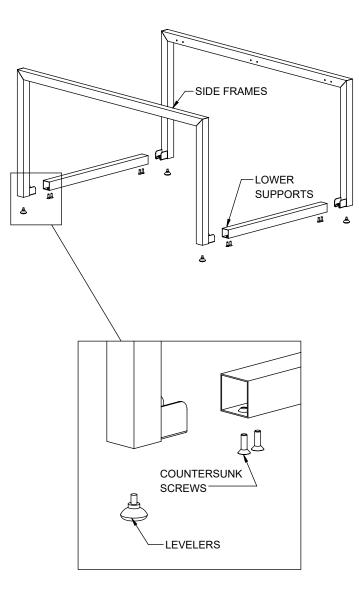


2

COMPLETE STRUCTURE WITH TOP SUPPORTS AS SHOWN. TIGHTEN SCREWS WITH SMALL ALLEN KEY.

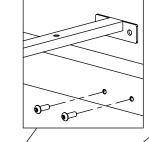

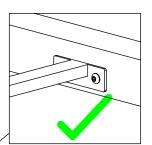

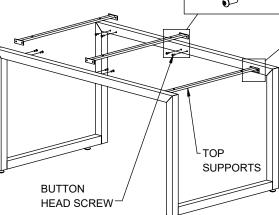

3

ALIGN WOOD TOP ON FRAME AND SECURE WITH WOOD SCREWS USING A POWER DRILL WITH A LOW TORQUE SETTING.